


BW-	1	2	BW+
BV-	3	4	BV+
BU-	5	6	BU+
AGND	7	8	AGND
B-IW	9	10	B-IU
A-IW	11	12	A-IU
BW-	13	14	BW+
BV-	15	16	BV+
BU-	17	18	BU+
B-ALMO	19	20	A-ALM
DGND	21	22	OV
UV	23	24	BZ
BREAK-ALMO	25	26	DGND

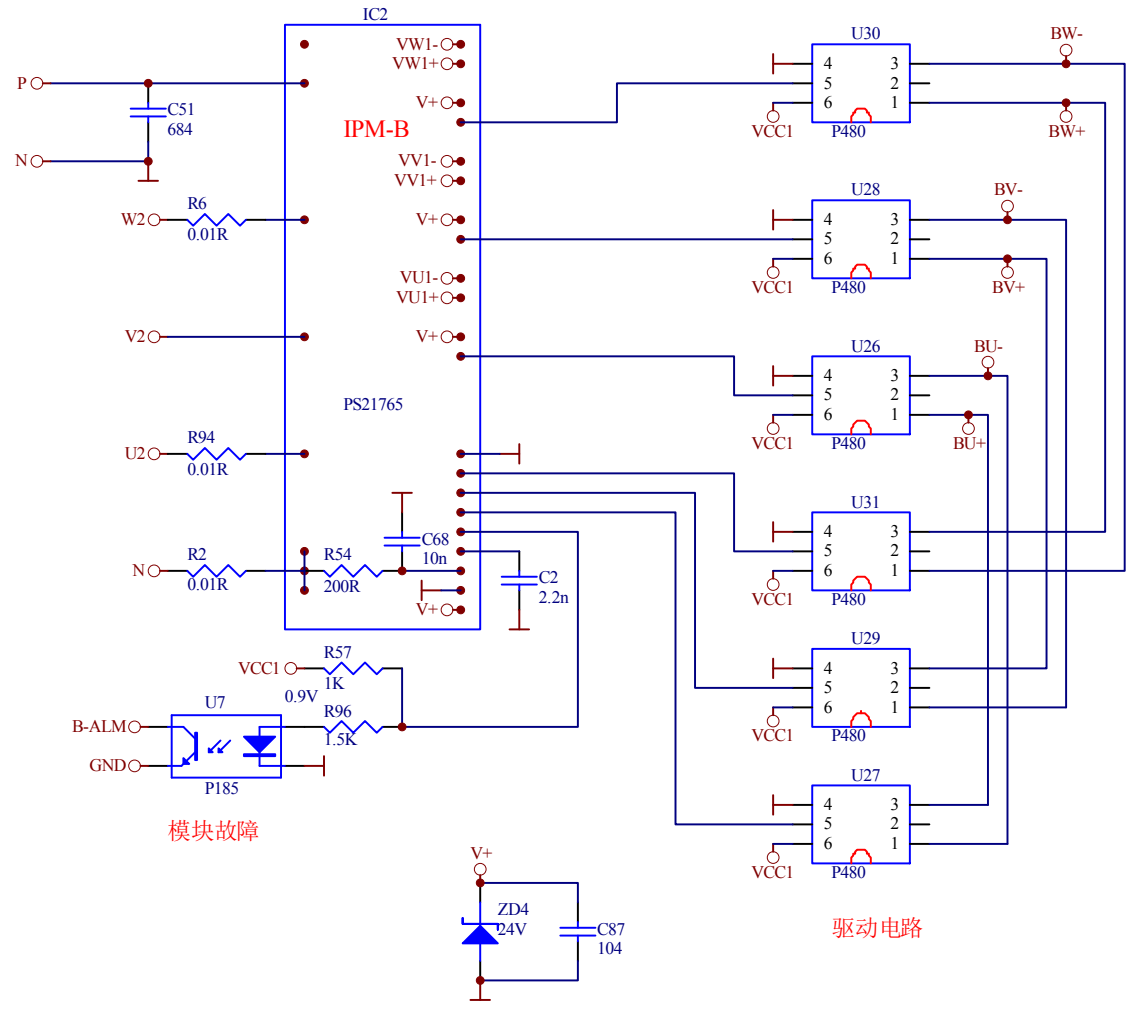

模块故障

驱动电路